


ASSEMBLY INSTRUCTIONS

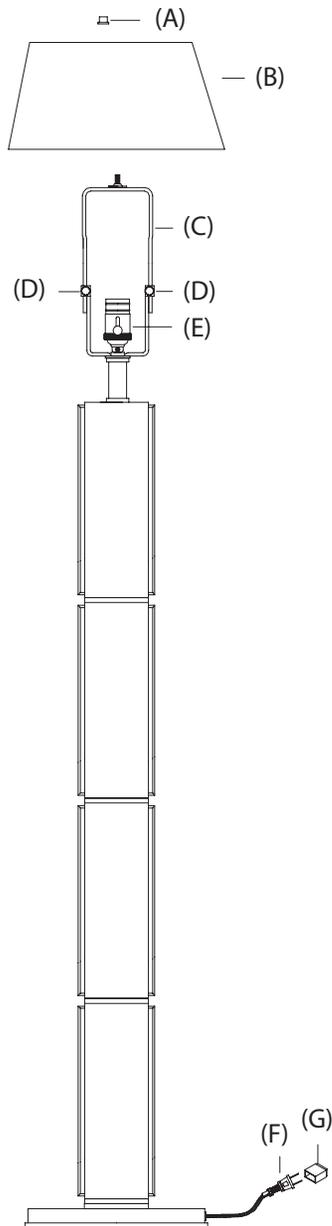

Upper Fifth Floor Lamp

Item # RL1470

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Remove threaded ring (E) from threaded section of lamp holder (F)
2. Attach bottom ring of harp (C) over top threaded section of lamp holder (F) and secure with threaded ring (E)
3. Remove finial (A) from harp (C). Place shade (B) over the bolt attached on top of the harp (C). Screw finial (A) onto the bolt to secure shade to the harp (C)
4. Insert light bulb into lamp holder (F) (not included)
5. Plug lamp into electrical outlet.

ADJUSTMENT INSTRUCTIONS

1. Loosen adjustment knobs (D) at both sides of harp (C).
2. Adjust harp (C), up or down, to get desired height. The lamp holder (F) should not show under shade (B) when the harp (C) is adjusted correctly.
3. Carefully tighten knobs (D).

CAUTION:

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

DISPOSAL:

Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.



RALPH LAUREN